



Page	Section	Change, Addition or Correction
6	Status line	<i>Change:</i> The Battery display is shown with a symbol rather than a number.
7	Text Entry	<p><i>Add:</i> The Spok21 functions in a “chat mode” manner. The screen will be cleared after speaking—but the text is stored in the background. This saves having to clear the screen manually during conversations.</p> <ul style="list-style-type: none"> • The Enter Key () will return the text to the display for editing or speaking again. • The Speak Key () will function without the text in the display. <p>As soon as a new key is pressed, the text will be deleted.</p>
11	6.4.2a.1 Scanning	<i>Add:</i> The Keyboard and Memory Keys remain active during scanning. Both the scan switch and the keyboard can be used interchangeably.
12	6.4.2a.2 Scan Timing	<i>Change:</i> Relative to the ATTENTION statement, since the Keyboard and the Memory Keys are active during scanning, it is not necessary to reset the Spok21 to get to the Setup screen.
13	6.4.3 Delay Times	<i>Change:</i> “• Delay of keys:” is called “wait” on the screen. “• Waiting time after pressing the key:” is called “lock” on the screen.
13	6.5.1 Font	<i>Change:</i> Delete the comment “(not yet implemented)”