


Optimist™ 3HD — Quick Reference Guide



Charging the battery



Make sure that the batteries are charged before attempting to use the Optimist 3. Plug the A/C adapter directly into the DC-in plug on the right side of the unit.

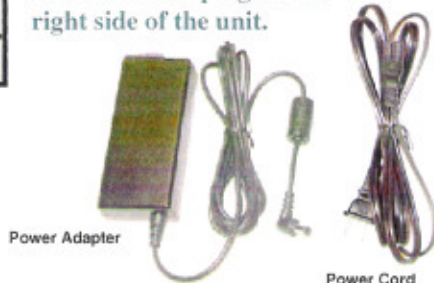

Power Adapter

Power Cord

Powering the unit on and off




To power the unit on or off, push the Power button located on the unit's front frame. When the unit is on, this button will put the unit into Stand By mode. Hold this button down for about 5 seconds to completely power the unit off, or choose Turn Off from the Start Menu.

Buttons



On-Screen Keyboard: Button 1 will display a keyboard on the screen. Use this when text input is needed.
Brightness/Sound Volume/Battery Levels: Button 4 will open the System Utility window where these functions can be adjusted and the capacities of the batteries are shown. Press and hold Button 3 while tapping either Button 2 or Button 4 to change brightness settings.

LEDs and Microphone

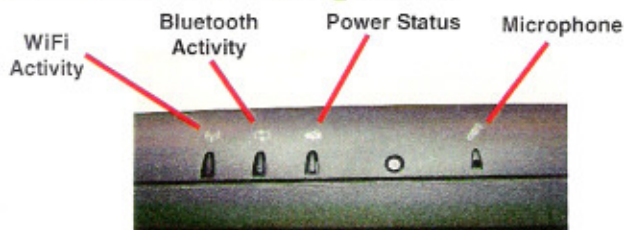


LED 3 - Power/Charging Status.

This LED will be ON when the unit is ON and running on battery power. This LED will flash when the batteries are being charged, and will be ON when the batteries are fully charged.

How to Right-Click



1. Tap the PenMount icon in the System Tray (this is the icon that says "pm"). The PenMount menu will appear.
2. Click on *Right Button* from the menu.
3. A small window with an icon of a mouse will appear on the screen.

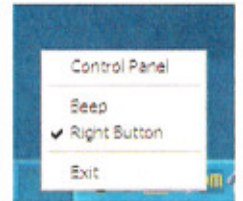

To Right-Click, first tap the mouse icon, then tap the screen. A right-click will be performed.



Calibrating the Touch Screen



1. Press Button 4 to open the System Utility window.
2. Tap the *Touch Calibration* button.
3. Follow the on-screen instructions

Memory:

The *Optimist 3HD* runs a subset of the Windows® XP operating system and contains a 20 GB Hard Drive.

CF cards and USB Thumb Drives will assist in transferring files from another computer. Although USB Thumb Drives are convenient, they protrude from the computer and are subject to being broken. The optimum choice seems to be CF cards, which are fully protected within the unit. A CF card Reader/Writer may be needed to transfer data from one computer to the other.

Windows is a registered trademark of Microsoft Corporation.
©2004 ZYGO Industries, Inc. manuals/zygo/opti3/opti3hd qr.pmd 070224 Printed in U.S.A.



<http://www.zygo-usa.com>

ZYGO INDUSTRIES, INC.
PO Box 1008
Portland, OR 97207-1008 U.S.A.
TEL: (503) 684-6006 FAX: (503) 684-6011
U.S.A. / Canada: (800) 234-6006
E-mail: zygo@zygo-usa.com